

DLS Effects EchoTAP volume and level adjustments:

Output A volume adjust: To increase or decrease the volume of OUT A adjust POT R36 (clockwise rotation increases the output volume of OUT A)

Input A level adjust: (For extra hot levels that may cause distortion you can decrease the input level. Adjust POT R58 (clockwise rotation reduces the level)

Note: you can also increase the level a slight bit by rotating the pot counter clockwise, but be careful of potential distortion due to clipping .

Input B level adjust: (For hot levels that cause distortion you can decrease the input level) Adjust POT R66 (clockwise rotation reduces the level)

Note: you can also increase the level a slight bit by rotating the pot counter clockwise, but be careful of potential distortion due to clipping .

WARNING: REMOVE POWER BEFORE OPENING THIS UNIT OR ADJUSTING THE POTS. DO NOT ADJUST ANY OTHER POTS OTHER THAN THOSE SHOWN OR YOU MAY DAMAGE YOUR UNIT AND VOID WARRANTEE. IF IN DOUBT CONTACT A QUALIFIED AUDIO DEALER OR ELECTRICIAN

To open: Unplug power and instrument, remove the feet, and slide the top cover toward the back of the unit until it dislodges from the bottom. Some units are a tight fit so apply even pressure to the front.

To re-assemble: Starting from the back of the bottom, slide the top cover toward you until correctly positioned. You may have to pull on the bottom sides slightly while sliding the top in. Put the feet back in but **DO NOT OVER TIGHTEN** or the screw will push through the rubber foot. (Note: The lock washer goes over the threaded hole located near the INPUT A... between the top cover and the bottom.)

